


420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)

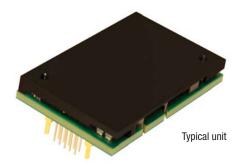

Output (V)	Current (A)	Input (Vdc)
9	39	36-60
12	35	36-75

### **FEATURES**

- Industry standard five pin Quarter-brick
- Optional digital PMBus interface
- High Efficiency
- Fast dynamic response
- ±1% Vout accuracy
- 2250Vdc input to output isolation voltage (Functional)
- Optional baseplate
- PMBus Rev 1.2 compliant
- Certified to UL/EN/IEC 60950-1, CAN/CSA-C22.2
   No. 60950-1, 2nd Edition, safety approvals and EN55022/CISPR22 standards

## **PRODUCT OVERVIEW**

Murata Power Solutions is introducing the first in a series of digitally controlled DC-DC converters that are based on a 32-bit ARM processor. The UDQ series provides a fully regulated, digitally controlled DC output in a ¼-brick format that will support the Advanced Bus Converter (ABC) industry standard footprint for isolated board mounted power modules. The UDQ series supports advances in power conversion technology including a digital interface supporting the PMBus protocol for communications to power modules.

The UDQ is an isolated, regulated, 420W-12Vout quarter brick that supports the TNV input voltage

range of 36V–75V with a typical efficiency of 95.5%. The converter also offers high input to output isolation up to 2250 VDC as required for Power over Ethernet (PoE) applications.

The UDQ series is suitable for applications covering MicroTCA, servers and storage applications, networking equipment, telecommunications equipment, Power over Ethernet (PoE), fan trays, wireless networks, wireless pre-amplifiers, and industrial and test equipment, along with other applications requiring a regulated 12V.

## **Power Management (PMBus Option)**

- Configurable soft-start/stop
- Precision delay and ramp-up
- Voltage sequencing and margining
- Voltage/Current/temp monitoring
- Configurable output voltage
- Power good

### **Applications**

- Distributed power architectures
- Intermediate bus voltage applications
- Servers and storage applications
- Network equipment











ORDERING GUIDE				
Root Model	Input (Volts)	Output (Volts)	Current (Amps)	Power (Watts)
UDQ2100/100	36-60	9	39	351
UDQ2204/001	36-75	12	35	420

The UDQ2100/100 is assembled with components and materials designed to withstand lead-free thermal paste-in-hole process (PIH). Dry pack packaging is also included as shown on page 17.

## PART NUMBER EXPLANATION: UDQ0004/001 (UDQn1n2n3n4/n5n6n7)

## U = Unipolar

## DQ = Digital Quarter brick

PRODUCT NUMBER								
UDQ	n1	n2	n3	n4	/	n5	n6	n7
Mechanical Pin Option	Χ				/			
Mechanical option		Х			/			
Hardware Option			Х	Х	/			
Configuration file					/	Х	Х	Х

<b>Option Designation</b>	Description
n1	0 = Standard Pin Length 5.33mm (0.210")
	1 = Surfact mount option
	2 = Lead length 3.69mm / Cut (0.145")
	3 = Lead Length 4.57mm / Cut (0.180")
	4 = Lead Length 2.79mm / Cut (0.110")
n2	0 = Open frame
	1 = Baseplate
	2 = Baseplate with GND-pin
n3 n4	00 = 36-60 Vin, 4-9.9 Vout adjusted, with digital interface
	04 = 36-75 Vin, 4-13.2 Vout adjusted, with digital interface
n5 n6 n7	001 = 12 V Standard configuration for 36-75 Vin, n3n4 = 04
	100 = 9V standard configuration for 36-60 Vin, high capacitive load
	xxx = Application Specific Configuration

420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)

## **FUNCTIONAL SPECIFICATIONS**

ABSOLUTE MAXIMUM RATINGS	Conditions @	Minimum	Typical/Nominal	Maximum	Units
Input Voltage, Continuous	Full power operation			80, 65 ①	Vdc
Input Voltage, Transient	Operating or non-operating, 100 mS max. duration			100, 80 ①	Vdc
Isolation Voltage	Input to output, with and without baseplate			2250	Vdc
Input Reverse Polarity	None, install external fuse		None		Vdc
On/Off Remote Control	Power on or off, referred to -Vin	-0.3		18	Vdc
Storage Temperature Range	Vin = Zero (no power)	-55		125	°C
Operating Temperature	See derating curves	-40		85	°C
Absolute maximume are etrace ratings. Expecure	of dovices to greater than any of those conditions of	nov adversely affect long	torm reliability Proper on	aration under conditions	other than these

Absolute maximums are stress ratings. Exposure of devices to greater than any of these conditions may adversely affect long-term reliability. Proper operation under conditions other than those listed in the Performance/Functional Specifications Table is not implied or recommended.

listed in the Performance/Functional Specification					
DIGITAL INTERFACE SPECIFICATIONS (PM	Bus MONITORING)				
Logic Input/Output specs.					
Logic Input Iow (VIL)	CTRL, SAO, SA1, PG, SCL, SDA			1.1	V
Logic input high (VIH)	OTTL, SAO, SAT, FU, SOL, SDA	2.1			V
Logic output low (VOL)	CTRL, PG, SALERT, SCL, SDA, $IoL = 6mA$			0.25	V
Logic output high (VOH)	CTRL, PG, SALERT, SCL, SDA, IoH = -6mA	2.7			V
Bus free time T (BUF)	3	1.3			μS
PMBus monitoring accuracy					
VIN_READ	Input Voltage	-2	±0.2	2	%
VOUT_READ	Output Voltage	-1	±0.1	1	%
IOUT_READ	Output Current (50-100% of max lo)	-6	±0.15	6	%
IOUT_READ	Output Current (10% of max lo)	-0.6		0.6	Α
TEMP_READ	Temperature	-5	±3.5	5	°C
Fault Protection Specifications					
	Factory default		33		•
Input Under Voltage Lockout, UVLV	Setpoint accuracy	-2		2	
	Hysteresis (factory default)		2		V
	Hysteresis (Configurable via PMBus of theshold	0			V
	range) ②				V % V V μS V V
	Delay		300		
	VOUT_UV_FAULT_LIMIT (factory default)		0		V
	VOUT_UV_FAULT_LIMIT (Configurable via	0		16	V
(Output Voltage)	PMBus,) ②				· ·
Over/Under Voltage protection, OVP/UVP	VOUT_OV_FAULT_LIMIT (factory default)		15.6		V
<b>3. p</b> -2, 2, 2	VOUT_OV_FAULT_LIMIT (Configurable via	Vout		16	V
	PMBus) ②			-	
	Fault response time		200		μS
	Setpoint accuracy (lo)	-6	44	6	%
Over Current Protection, OCP	IOUT_OC_FAULT_LIMIT (factory default)		41	100	A
,	IOUT_OC_FAULT_LIMIT (Configurable via PMBus) ②	0		100	A
	Fault response time		200		μS
	OTP_FAULT_LIMIT (factory default)		125		°C
	OTP_FAULT_LIMIT (Configurable via PMBus) ②	-50		125	°C
Over Temperature Protection, OTP	OTP hysteresis (factory default)		10		°C
	OTP hysteresis (Configurable via PMBus) ②	0		125	°C
	Fault response time		300		μS

#### **Notes**

- $\textcircled{1} \quad \text{For UDQ2100/100 model}.$
- ② Typical at TA = +25°C under nominal line voltage and full-load conditions. All models are specified with an external 330 $\mu$ F external input capacitor and 3.5mF || 10 $\mu$ F || 1 $\mu$ F capacitors across their output pins.
- ③ PMBus timing parameters according to PMBus spec.

420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)

## FUNCTIONAL SPECIFICATIONS, UDQ2100/100 (9VOUT, 39A, 351W)

INPUT	Conditions 3	Minimum	Typical/Nominal	Maximum	Units
Operating voltage range		36	48	60	Vdc
Recommended External Fuse	Fast blow			20	Α
Start-up threshold	Rising input voltage	34	35	36	Vdc
Undervoltage shutdown	Falling input voltage	32	33	34	Vdc
Turn-On/Turn-Off Hysteresis		1	2		Vdc
Input current					
Full Load Conditions	Vin = nominal		7.738	7.89	Α
Low Line input current	Vin = minimum		10.484	10.692	Α
Inrush Transient	Vin = 48V.		0.015		A2-Sec.
Short Circuit input current			0.05	0.1	Α
No Load input current	lout = minimum, unit=0N		50	150	mA
Shut-Down input currrent(Off, UV, OT)			20	50	mA
Pre-biased startup	External output voltage < Vset		Monotonic		
DYNAMIC CHARACTERISTICS					
Fixed Switching Frequency		133	140	147	KHz
Startup Time	From Vin connection to 90% Vo 10-100% of max lo		24	30	mS
Ramp-up time	From 10-90% of Vo (10-100% of max lo		12	15	mS
Dynamic Load Response	50-75-50% load step to 1% error band		50	100	μSec
Dynamic Load Peak Deviation	same as above		±200		mV
GENERAL and SAFETY					
Efficiency	Vin=48V, half load	94.9	95.9		%
	Vin=48V, full load	93.5	94.5		%
Isolation					
Isolation Voltage	Input to output, with and without baseplate		1500		Vdc
Isolation Voltage, input to baseplate	With baseplate		750		Vdc
Isolation Voltage, output to baseplate	With baseplate		750		Vdc
Insulation Safety Rating			functional		
Isolation Resistance			100		MΩ
Isolation Capacitance			2200		pF
Safety	Certified to UL-60950-1, CSA-C22.2 No.60950- 1, IEC/EN60950-1, 2nd edition		Yes		
Calculated MTBF	Per Telcordia SR-332, issue 1, class 3, ground fixed, Tcase=+25°C		TBD		Hours x 10 <sup>3</sup>

420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)


## FUNCTIONAL SPECIFICATIONS, UDQ2100/100 (9VOUT, 39A, 351W) (CONT.)


OUTPUT	Conditions ①	Minimum	Typical/Nominal	Maximum	Units
Total Output Power		0	351	354.12	W
Voltage					
Setting Accuracy	At 100% load, no trim	8.92	9	9.08	Vdc
Over-Voltage Protection	Magnetic Feedback		11.7	11.8	Vdc
Output Voltage Range	User-adjustable (see operating information)	4		9.9	Vdc
Current					
Output Current Range		0	39	39	A
Minimum Load			No minimum load		
Current Limit Inception	90% of Vnom., after warmup	41	44	47	A
Short Circuit					
Short Circuit Current	Hiccup technique, autorecovery within 1% of Vout		2	3	Α
Short Circuit Duration	Output shorted to ground, no damage		Continuous		
(remove short for recovery)	output shorted to ground, no damage		Contilluous		
Short circuit protection method	Hiccup current limiting		Non-latching		
Regulation					
Line Regulation	Vin=min. to max., Vout=nom., full load			±0.133	%
Load Regulation	lout=min. to max., Vin=nom.			±0.128	%
Ripple and Noise	5 Hz-20 MHz BW, Cout=1μF MLCC paralleled with 10μF		50	110	mV pk-pk
Temperature Coefficient	At all outputs		0.02		% of Vnom./°C
Maximum Output Capacitance		2.2	3.9	6	mF
ENVIRONMENTAL					
Operating Ambient Temperature Range	With derating	-40		85	°C
Storage Temperature	Vin = Zero (no power)	-55		125	°C
Thermal Protection/Shutdown	Measured at hotspot	122	125	128	°C
Electromagnetic Interference	External filter is required				
Conducted, EN55022/CISPR22	External filter necessary		В		Class
RoHS rating			RoHS-6		


#### Notes

Typical at TA = +25°C under nominal line voltage and full-load conditions. All models are specified with an external 300μF external input capacitor and 3.5mF || 10μF || 1μF capacitors across their output pins.

their output pins.
② PMBus timing parameters according to PMBus spec.

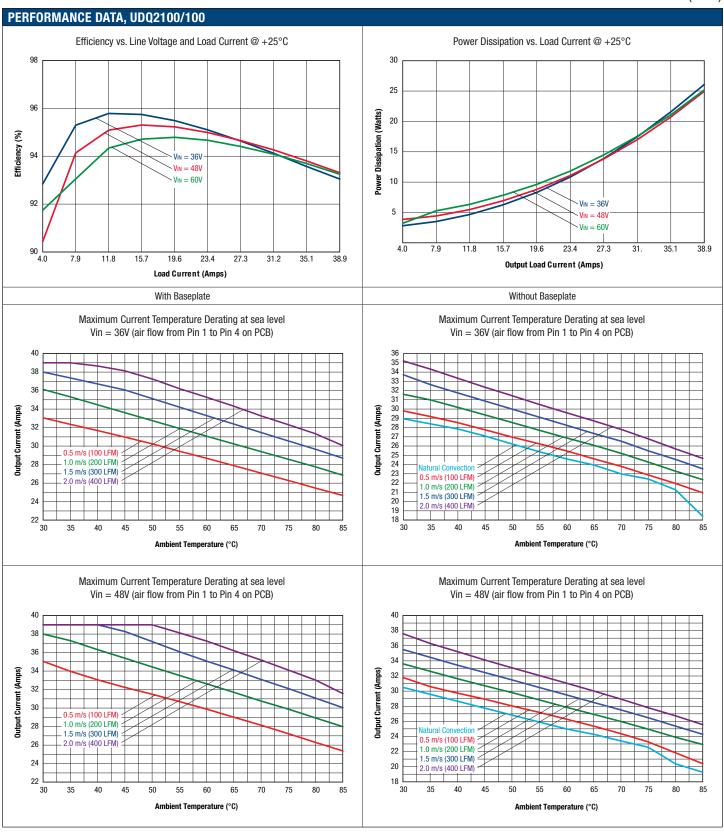

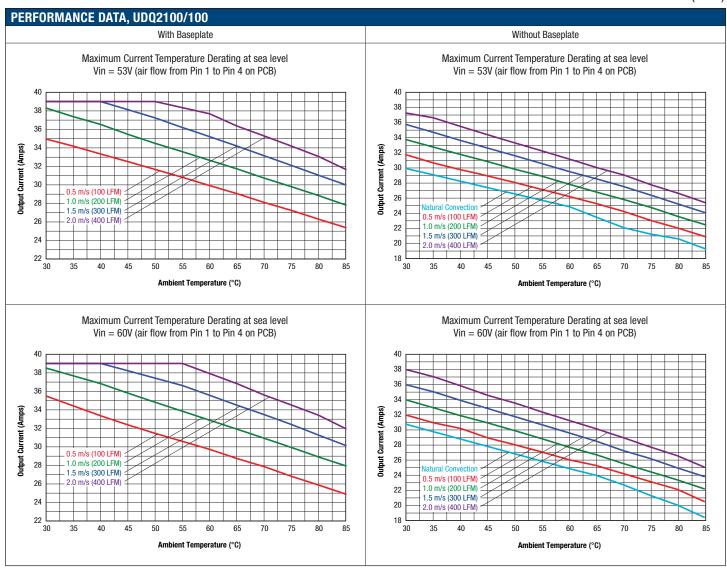

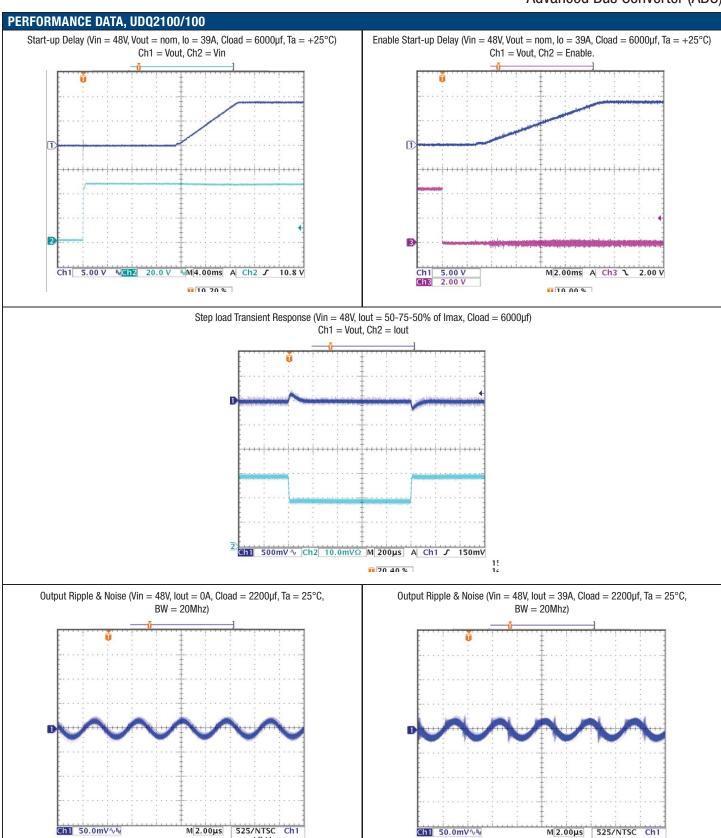

All Lines

20 40 %

420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)

## FUNCTIONAL SPECIFICATIONS, UDQ2204/001 (12VOUT, 35A, 420W)

INPUT	Conditions ①	Minimum	Typical/Nominal	Maximum	Units
Operating voltage range		36	48	75	Vdc
Recommended External Fuse	Fast blow			20	Α
Start-up threshold	Rising input voltage	34	35	36	Vdc
Undervoltage shutdown	Falling input voltage	32	33	34	Vdc
Turn-On/Turn-Off Hysteresis		1	2		Vdc
Input current					
Full Load Conditions	Vin = nominal		9.162	9.259	Α
Low Line input current	Vin = minimum		12.281	12.411	Α
Inrush Transient	Vin = 48V.		0.015		A2-Sec.
Short Circuit input current			0.05	0.1	Α
No Load input current	lout = minimum, unit=0N		69	150	mA
Shut-Down input currrent(Off, UV, OT)			8.3	15	mA
Pre-biased startup	External output voltage < Vset		Monotonic		
Back Ripple Current			80	100	mA
DYNAMIC CHARACTERISTICS					
Fixed Switching Frequency		133	140	147	KHz
Startup Delay	Vin On to 90% Vout regulated		24	30	mS
Ramp-up time	Remote On to 90% Vout regulated		12	15	mS
Dynamic Load Response	50-75-50% load step to 1% of Vout		200	250	μSec
Dynamic Load Peak Deviation	same as above		±200		mV
GENERAL and SAFETY					
Efficiency	Vin=48V, half load	95.4	96.4		%
	Vin=48V, full load	94.5	95.5		%
Isolation					
Isolation Voltage	Input to output, with and without baseplate		1500		Vdc
Isolation Voltage, input to baseplate	With baseplate		750		Vdc
Isolation Voltage, output to baseplate	With baseplate		750		Vdc
Isolation Resistance			100		ΜΩ
Isolation Capacitance			2200		pF
Safety	Certified to UL-60950-1, CSA-C22.2 No.60950- 1, IEC/EN60950-1, 2nd edition		Yes		
Calculated MTBF	Per Telcordia SR-332, issue 1, class 3, ground fixed, Tcase=+25°C		TBD		Hours x 10 <sup>3</sup>

420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)


## FUNCTIONAL SPECIFICATIONS, UDQ2204/001 (12VOUT, 35A, 420W) (CONT.)

OUTPUT	Conditions ①	Minimum	Typical/Nominal	Maximum	Units
Total Output Power		0	420	424.4	W
Voltage					
Setting Accuracy	At 100% load, no trim	11.88	12	12.12	Vdc
Output Voltage tolerance band	0-100% of max lo.	11.76		12.24	
Over-Voltage Protection	Magnetic Feedback		15.6	15.7	Vdc
Output Voltage Range	User-adjustable (see operating information)	4	12	13.2	Vdc
Current					
Output Current Range		0	35	35	Α
Minimum Load			No minimum load		
Current Limit Inception	90% of Vnom., after warmup	37	41	44	Α
Short Circuit					
Short Circuit Current	Hiccup technique, autorecovery within 1% of Vout		0.2	0.3	Α
Short Circuit Duration	Output shorted to ground, no damage		Continuous		
(remove short for recovery)	output shorted to ground, no damage		Continuous		
Short circuit protection method	Hiccup current limiting		Non-latching		
Regulation					
Line Regulation	Vin=min. to max., Vout=nom., full load			±0.23	%
Load Regulation	lout=min. to max., Vin=nom.			±0.166	%
Ripple and Noise	5 Hz-20 MHz BW, Cout=1µF MLCC paralleled with 10µF		60	150	mV pk-pk
Temperature Coefficient	At all outputs		0.02		% of Vnom./°C
Recommended Capacitive Load	Full resistive load, low ESR	0.1	3.5	6	mF
ENVIRONMENTAL					
Operating Ambient Temperature Range	With derating	-40		85	°C
Storage Temperature	Vin = Zero (no power)	-55		125	°C
Thermal Protection/Shutdown	Measured at hotspot	122	125	128	°C
Electromagnetic Interference	External filter is required				
Conducted, EN55022/CISPR22	External filter necessary		В		Class
RoHS rating			RoHS-6		


## **Notes**


① Typical at TA =  $+25^{\circ}$ C under nominal line voltage and full-load conditions. All models are specified with an external 330 $\mu$ F external input capacitor and 3.5mF ||  $10\mu$ F ||  $1\mu$ F capacitors across their output pins.

② PMBus timing parameters according to PMBus spec.

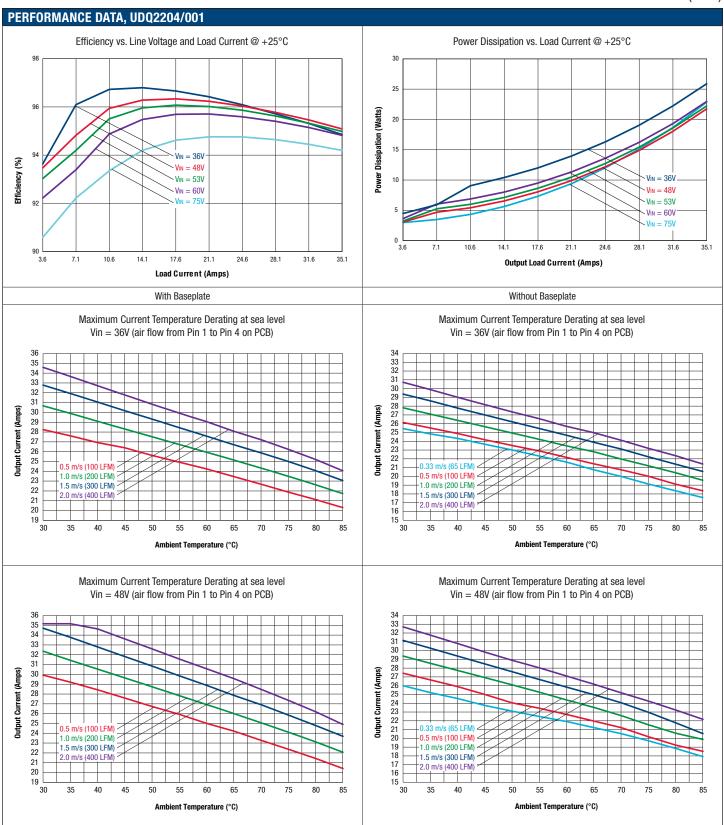





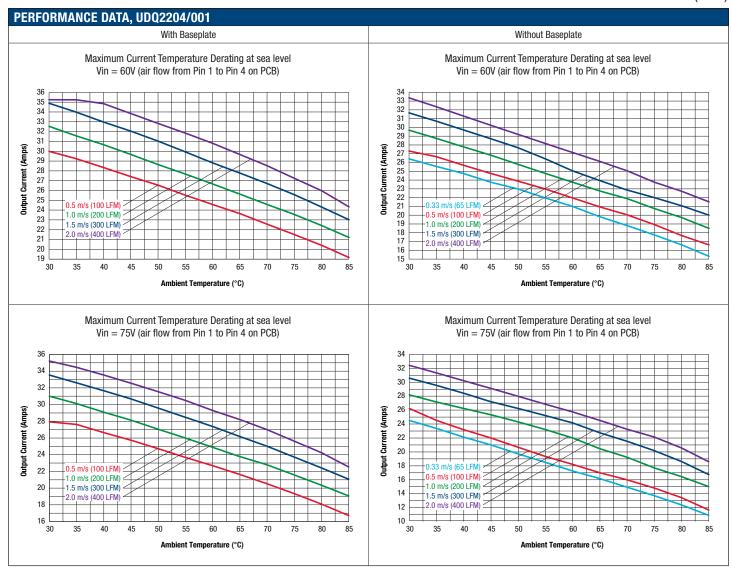

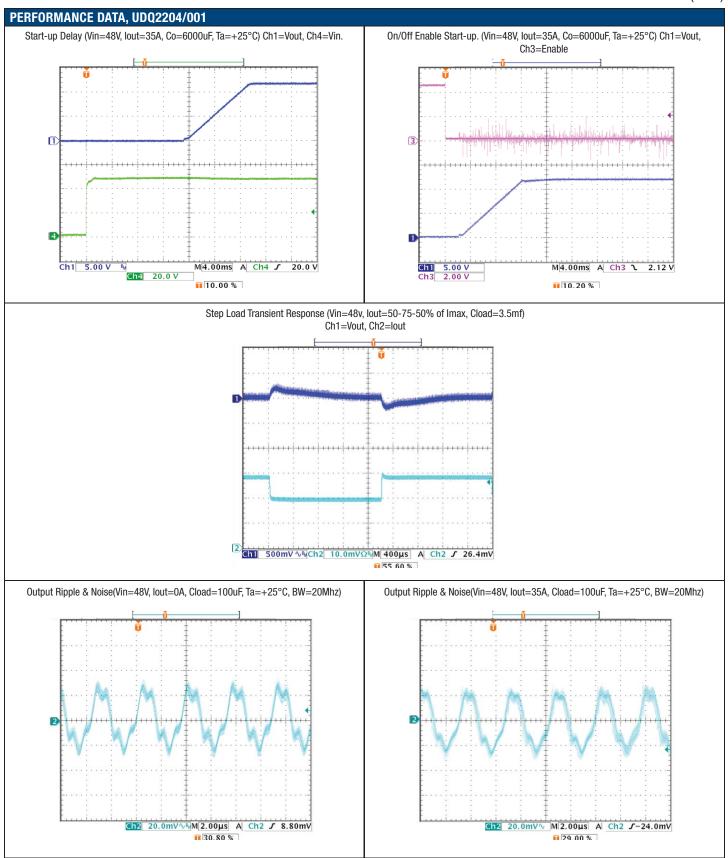




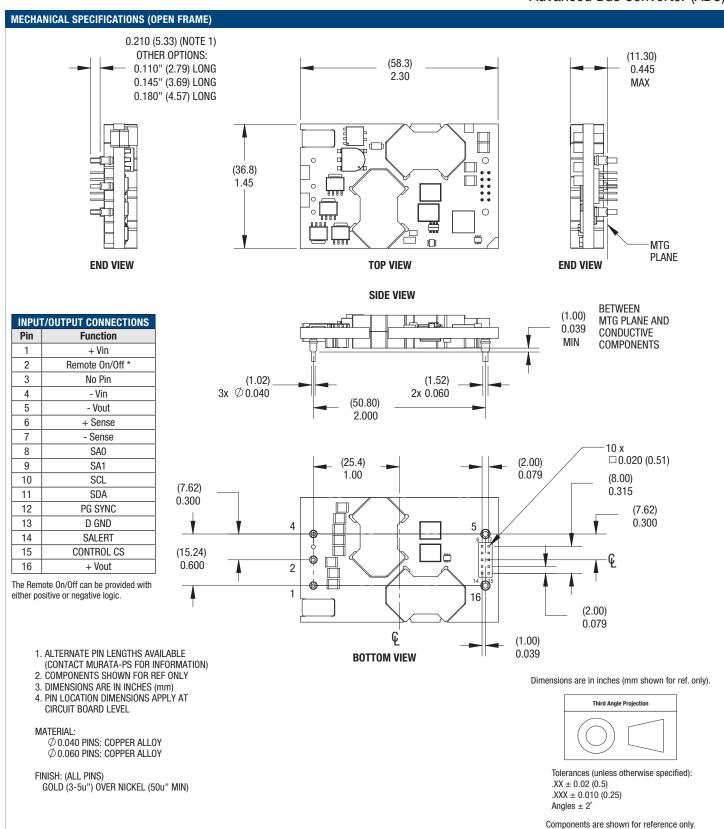


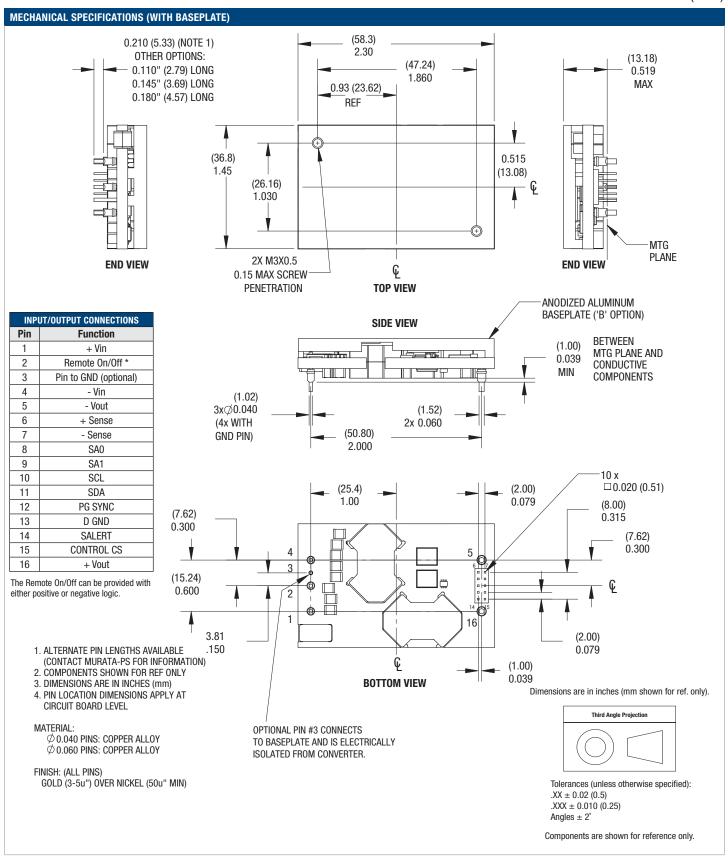




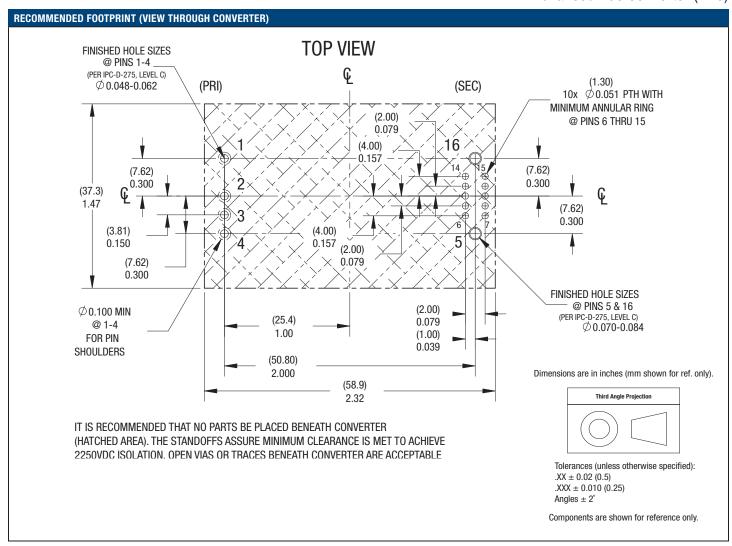



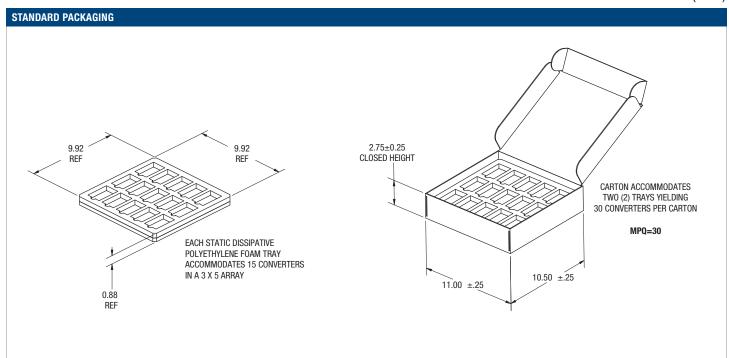



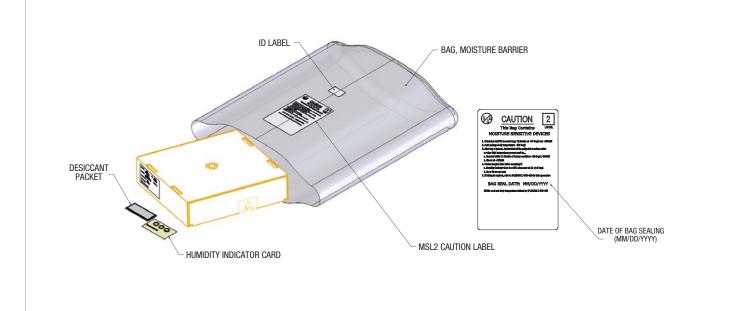

#### **TECHNICAL NOTES**

## **Power Management Overview**

This module is prepared with a PMBus interface. The module includes a wide range of readable and configurable power management features that are easy to implement with a minimum of external components. Furthermore, the module includes protection features that continuously protects the load from damage due to unexpected system faults. The SALERT pin alerts the unit if there is a fault in the module. The following product parameters can continuously be monitored by a host: Vin, Vout/current, duty cycle and internal temperature. The module is distributed with a default configuration suitable for a wide range operation in terms of Vin, Vout, and load. The configuration is kept in an internal Non-Volatile Memory (NVM). All power management functions can be reconfigured using the PMBus interface. The product provides a PMBus digital interface that enables the user to configure many aspects of the device operation as well as monitor the input and output parameters. Please contact Murata-PS for design support of special configurations.

## **Remote On/Off Control**

The UDQ series modules are equipped with both Primary (Remote On/Off, Internal pull up resistor) and secondary (CONTROL CS, disabled and floating) control pins for increased system flexibility. Both are configurable via PMBus. The On/Off pins are TTL open-collector and/or CMOS open-drain compatible (see general specifications for threshold voltage levels).

The standard product is provided with negative logic. Models are on (enabled) when the On/Off is grounded or brought to within a low voltage (see specifications) with respect to -Vin. The device is off (disabled) when the On/Off is left open or is pulled high to +6Vdc with respect to -Vin. The On/Off function allows the module to be turned On/Off by an external device switch.

Positive-logic models are enabled when the On/Off pin is left open or is pulled high to +6V with respect to -Vin. Positive logic devices are disabled when the On/Off is grounded or brought to within a low voltage (see specifications) with respect to -Vin.

To turn the module On or Off the remote On/Off pin should be left open for a minimum of  $150\mu S$ . The module can be power up automatically without the need for control signals or a switch; the remote On/Off pin can be wired directly to —Vin or disabled via the 0xE3 command. The logic option for the primary remote On/Off control is configured via 0xE3 command using the PMBus.

## **CONTROL CS (Secondary On/Off)**

The CONTROL CS pin can be configured via the PMBus. The default configuration is disabled and floating. The output can be configured to an internal pull up resistor up to 3.3V using the MFR\_MULTI\_PIN\_CONG (0xF9) PMBus command. The CONTROL CS pin can be left open when not being used. The logic options for the secondary On/Off can be negative or positive logic. The logic for the secondary remote control is configured via ON\_OFF\_CONFIG (0x02) command using the PMBus command. See also MFR\_MULTI\_PIN\_CONFIG section.

### **Output Voltage Adjust (Trim) Using PMBus**

The output voltage of this module can be reconfigured using the PMBus interface.

#### **Margin Up/Down Controls**

These controls allow the output voltage to be momentarily adjusted, either up or down, by a nominal 10%. This provides a suitable method for dynamically testing the operation of the load circuit over its supply margin or range. It can also be used to confirm the function of supply voltage supervisors. The margin up and down levels of the module can be reconfigured using the PMBus interface.

## Soft-start Power Up

The default rise time of the ramp up is 10 ms. When starting by applying input voltage the control circuit boot-up time adds an additional 15 ms delay. The soft-start power up of the module can be reconfigured using the PMBus interface. The DLS variants have a pre-configured ramp up time of 25 ms.

#### **Over Voltage Protection (OVP)**

The module includes over voltage limiting circuitry for protection of the load. The default OVP limit is 30% above the nominal output voltage. If the output voltage surpasses the OVP limit, the module can respond in different ways. The default response from an over voltage fault is to immediately shut down. The device will continuously check for the presence of the fault condition, and when the fault condition no longer exists the device will be re-enabled. The OVP fault level and fault response can be re-configured using the PMBus interface.

#### **Over Current Protection (OCP, Current limit)**

The module includes current limiting circuitry for protection at continuous overload. The default setting for the product is hicup mode if the maximum output current is exceeded and the output voltage is below 0.3×Vout, set in command IOUT\_OC\_LV\_FAULT\_LIMIT (0x48). Above the trip voltage value in command 0x48 the product will continue operate while maintaining the output current at the value set by IOUT\_OC\_FAULT\_LIMIT (0x46). The load distribution should be designed for the maximum output short circuit current specified. Droop Load Share alternates (DLS) will enter hic-up mode, with a trip voltage, 0.04×Vout, set in command IOUT\_OC\_LV\_FAULT\_LIMIT (0x48). Above the trip voltage in command (0x48) the product will continue operate while maintaining the output current at the value set by IOUT\_OC\_FAULT\_LIMIT (0x46). The over current protection of the module can be reconfigured using the PMBus interface.

#### **Pre-bias Start-up Capability**

The module has a Pre-bias start up functionality and will not sink current during start up if a Pre-bias source is present at the output terminals. If the Pre-bias voltage is lower than the target value set in VOUT\_COMMAND (0x21), the module will ramp up to the target value. If the Pre-bias voltage is higher than the target value set in VOUT\_COMMAND (0x21), the product will ramp down to the target value and in this case sink current for a limited of time set in the command TOFF\_MAX\_WARN\_LIMIT (0x66).

## **Power Good**

The module provides Power Good (PG) flag in the Status Word register that indicates the output voltage is within a specified tolerance of its target level



#### Bit 7:6 0 0 0 0 00 = Stand alone 01 = Slave (N/A)10 = DLS0 0 0 0 0 0 0 0 0 0 0 0 11 = Master (N/A) Bit 5 Power Good High Z 0 0 0 0 1 0 0 0 0 1 1 when active Bit 4 0 0 0 0 0 0 0 0 0 0 0 0 Tracking enable (N/A) Bit 3 0 0 0 0 0 0 0 0 0 0 0 **External reference** 0 (N/A) Bit 2 **Power Good** 0 0 1 1 0 0 1 1 1 1 Enable Bit 1 1 1 1 1 0 0 0 0 0 0 Reserved **Secondary Remote Control** 0 1 0 0 0 0 1 1 0 1 1 Pull up/down resistor enable 1) Sec RC w/ pull up/down (0x25) Sec RC w/ pull up/down (0xA7) Good Push-pull, Sec RC w/ pull up/down (0x05) PMBus Control (0x24) Good High Z when active, PMBus Control (0xA6) Sec RC w/ pull up/down (0x87) Stand alone, Power Good Push-pull, PMBus Control (0x04) DLS, Power Good Push-pull, PMBus Control (0x86) 1) When not used with PMBus, the CTRL input can be active, Good High Z when active, pull up/down (0x01) internally pulled up or down depending on if it is active Good High Z when DLS, Power Good High Z when active, high or low. When active low Stand alone, PMBus Control (0x00) it will be pulled up and vice DLS, Power Good Push-pull, Sec RC w/

and no fault condition exists. If specified in section Connections, the product also provides a PG signal output. The Power Good signal is by default configured as active low. Push-pull and can be reconfigured via the PMBus interface. The Power Good output can be configured as Push-pull or "High Z when active" to permit AND'ing of parallel devices. It is not recommended to use Push-pull when paralleling PG-pins, see MFR\_MULTI\_PIN\_CONFIG.

DLS, Power

### **Switching Frequency Adjust Using PMBus**

The switching frequency is set to 140 kHz as default but this can be reconfigured via the PMBus interface. The product is optimized at this frequency but can run at lower and higher frequency, (125-150 kHz). The electrical performance can be affected if the switching frequency is changed.

## MFR\_MULTI\_PIN\_CONFIG

The MFR\_MULTI\_PIN\_CONFIG (0xF9) command enables or disables different functions inside the product. This command can be configured according to the table for different functions.

The MFR\_MULTI\_PIN\_CONFIG can be reconfigured using the PMBus interface. Default configuration is set to Power Good Push-Pull (0x04) for stand alone variants and DLS Power Good Push-Pull (0x86) for Droop Load Share variants.

#### **PMBus Interface**

This module offers a PMBus digital interface that enables the user to configure many characteristics of the device operation as well as to monitor the input and output voltages, output current and device temperature. The module can be used with any standard two-wire I2C or SMBus host device. In addition, the module is compatible with PMBus version 1.2 and includes an SALERT line to help alleviate bandwidth limitations related to continuous fault monitoring. The module supports 100 kHz and 400 kHz bus clock frequency only. The PMBus signals, SCL, SDA and SALERT require passive pull-up resistors as stated in the SMBus Specification. Pull-up resistors are required to guarantee the rise time as follows:

$$t = R_n C_n \le \mu s$$

where  $R_p$  is the pull-up resistor value and  $C_p$  is the bus load. The maximum allowed bus load is 400 pF. The pull-up resistor should be tied to an external supply between 2.7 to 5.5 V, which should be present prior to or during powerup. If the proper power supply is not available, voltage dividers may be applied. Note that in this case, the resistance in the equation above corresponds to parallel connection of the resistors forming the voltage divider.

It is recommended to always use PEC (Packet Error Check) when communicating via PMBus. For these products it is a requirement to use PEC when using Send Byte to the device, for example command "RESTORE\_DEFAULT\_ALL".

#### **Monitoring via PMBus**

A system controller (host device) can monitor a wide variety of parameters through the PMBus interface. The controller can monitor fault conditions by monitoring the SALERT pin, which will be asserted when any number of preconfigured fault or warning conditions occur. The system controller can also continuously monitor any number of power conversion parameters including but not limited to the following:

Input voltage

Power

Stand alone,

Stand alone, Power

Stand alone, Power

Stand alone,

- Output voltage
- Output current
- Internal junction temperature
- Switching frequency (Monitors the set value not actual frequency)
- Duty cycle

#### **Software Tools for Design and Production**

For these modules Murata-PS provides software for configuring and monitoring via the PMBus interface. For more information please contact your local Murata-PS representative.

#### **PMBus Addressing**

The following figure and table show recommended resistor values with min and max voltage range for hard-wiring PMBus addresses (series E12, 1% tolerance resistors suggested):

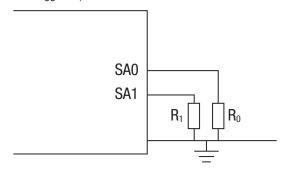


Figure 1. Schematic of Connection of Address Resistors

SAO/SA1 Index	$R_{SA0}/R_{SA1}$ [k $\Omega$ ]
0	10
1	22
2	33
3	47
4	68
5	100
6	150
7	220

The SAO and SA1 pins can be configured with a resistor to GND according to the following equation.

PMBus Address =  $8 \times (SA0 \text{ value}) + (SA1 \text{ value})$ 

If the calculated PMBus address is 0, 11 or 12, PMBus address 127 is assigned instead. From a system point of view, the user shall also be aware of further limitations of the addresses as stated in the PMBus Specification. It is not recommended to keep the SAO and SA1 pins left open.

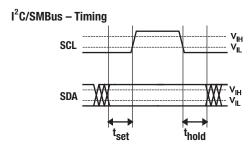


Figure 2. Setup and hold times timing diagram

The setup time,  $t_{set}$ , is the time data, SDA, must be stable before the rising edge of the clock signal, SCL. The hold time thold, is the time data, SDA, must be stable after the rising edge of the clock signal, SCL. If these times are violated incorrect data may be captured or meta-stability may occur and the bus communication may fail. When configuring the product, all standard SMBus protocols must be followed, including clock stretching. Additionally, a bus-free time delay between every SMBus transmission (between every stop & start condition) must occur. Refer to the SMBus specification, for SMBus electrical and timing requirements. Note that an additional delay of 5 ms has to be inserted in case of storing the RAM content into the internal non-volatile memory.

#### **PMBus Commands**

The products are PMBus compliant. The following table lists the implemented PMBus read commands. For more detailed information see PMBus Power System Management Protocol Specification; Part I – General Requirements, Transport and Electrical Interface and PMBus Power System Management Protocol; Part II – Command Language.

DESIGNATION	CMD	PROT
Standard PMBus Commands		
Control Commands		
OPERATION	01h	No
ON_OFF_CONFIG	02h	No
WRITE_PROTECT	10h	No
Output Commands		
VOUT_MODE	20h	No
VOUT_COMMAND	21h	No
/OUT_TRIM	22h	No
/OUT_CAL_OFFSET	23h	Yes
/OUT_MAX	24h	No
VOUT_MARGIN_HIGH	25h	No
/OUT_MARGIN_LOW	26h	No
/OUT_TRANSITION_RATE	27h	No
VOUT_SCALE_LOOP	29h	Yes
/OUT_SCALE_MONITOR	2Ah	Yes
MAX_DUTY	32h	No
FREQUENCY_SWITCH	33h	No
/IN_ON	35h	No
/IN_OFF	36h	No
OUT_CAL_GAIN	38h	Yes
IOUT_CAL_OFFSET	39h	Yes
Fault Commands		
VOUT_OV_FAULT_LIMIT	40h	No
VOUT_OV_FAULT_RESPONSE	41h	No
VOUT_OV_WARN_LIMIT	42h	No
VOUT UV WARN LIMIT	43h	No
VOUT_UV_FAULT_LIMIT	44h	No
VOUT UV FAULT RESPONSE	45h	No
IOUT_OC_FAULT_LIMIT	46h	No
IOUT_OC_FAULT_RESPONSE	47h	No
IOUT_OC_LV_FAULT_LIMIT	48h	No
IOUT_OC_WARN_LIMIT	4Ah	No
OT_FAULT_LIMIT	4Fh	No
OT_FAULT_RESPONSE	50h	No
OT WARN LIMIT	51h	No
UT WARN LIMIT	52h	No
UT FAULT LIMIT	53h	No
UT_FAULT_RESPONSE	54h	No
VIN_OV_FAULT_LIMIT	55h	No
VIN_OV_FAULT_RESPONSE	56h	No
VIN_OV_WARN_LIMIT	57h	No
VIN_UV_WARN_LIMIT	58h	No
VIN_UV_FAULT_LIMIT	59h	No
VIN_UV_FAULT_RESPONSE	5Ah	No
POWER_GOOD_ON	5Eh	No
POWER_GOOD_OFF	5Fh	No
Time Setting Commands	0111	
TON DELAY	60h	No
TON RISE	61h	No
TON_MAX_FAULT_LIMIT	62h	No
TON_MAX_FAULT_RESPONSE	63h	No
TOFF DELAY		No
TOFF_BELAY TOFF_FALL	64h	
TOFF_FALL TOFF MAX WARN LIMIT	65h 66h	No No



Status Commands (Read Only)	DECIONATION	OMB	DDOT
CLEAR FAULTS         03h         No           STATUS BYTES         78h         No           STATUS WORD         79h         No           STATUS WOUT         7Ah         No           STATUS JOUT         7Ah         No           STATUS JOUT         7Ch         No           STATUS JEMPERATURE         7Dh         No           STATUS JEMPERATURE         7Dh         No           STATUS JEMPERATURE         7Dh         No           STATUS JEMPERATURE         7Dh         No           STATUS JEMPERATURE         7Ph         No           Monitior Commands (Read Only)         8Bh         No           READ JOUT         8Bh         No           READ JUTY CYCLE         8Bh         No           READ JEMPERATURE 1         8Bh         No           READ JEMPERATURE 2         8Bh         No           READ JEMPERATURE 1         8Bh         No           READ JEMPERATURE 2         8Bh         No           READ JEMPERATURE 2         8Bh         No           READ JEMPERATURE 2         8Bh         No           READ JEMPERATURE 1         8Dh         No           READ JEMPERATURE 2         8Bh	DESIGNATION	CMD	PROT
STATUS BYTES   78h			
STATUS   WORD	_		
STATUS_VOUT	_		
STATUS_IOUT	_	-	1
STATUS_INPUT	_		
STATUS_CML	_		
STATUS_CML			
STATUS_OTHER			
Monitior Commands (Read Only)   READ_VIN			
READ_VIN         88h         No           READ_VOUT         88h         No           READ_IOUT         8Ch         No           READ_TEMPERATURE_1         80h         No           READ_TEMPERATURE_2         8Eh         No           READ_TEMPERATURE_2         8Eh         No           READ_TEMPERATURE_2         94h         No           Designation         Cmd         Prot           READ_TERQUENCY         95h         No           Configuration and Control Commands           USER_DATA_00         Boh         No           Configuration Commands (Read Only)           PMBUS_REVISION         98h         No           MFR_ID         99h         Yes           MFR_MODEL         9Ah         Yes           MFR_MODEL         9Ah         Yes           MFR_REVISION         98h         No           MFR_LOCATION         9Ch         Yes           MFR_LOCATION         9Ch         Yes           MFR_BERIAL         9Ch         Yes           Supervisory Commands         9ch         Yes           STORE_DEFAULT_ALL         11h         Yes           STORE_DEFAULT_ALL </td <td></td> <td>7Fh</td> <td>No</td>		7Fh	No
READ_VOUT         88h         No           READ_IOUT         8Ch         No           READ_TEMPERATURE_1         8Dh         No           READ_TEMPERATURE_2         8Eh         No           READ_DUTY_CYCLE         94h         No           Designation         Cmd         Prot           READ_FREQUENCY         95h         No           Configuration and Control Commands         USER_DATA_00         B0h         No           Identification Commands (Read Only)         PMBUS_REVISION         98h         No           MFR_ID         99h         Yes         MFR_MPR_MODEL         9Ah         Yes           MFR_MPR_REVISION         98h         Yes         Yes         MFR_LOCATION         9Ch         Yes           MFR_DATE         9Dh         Yes         MFR_SERIAL         9Ch         Yes           SUpervisory Commands         STORE_DEFAULT_ALL         11h         Yes           STORE_DEFAULT_ALL         11h         Yes         SESTORE_DEFAULT_ALL         12h         No           RESTORE_USER_ALL         15h         No         RESTORE_USER_ALL         15h         No           RESTORE_USER_ALL         15h         No         No         MFR_POMODE_NO	` "		
READ_IOUT         8Ch         No           READ_TEMPERATURE_1         8Dh         No           READ_TEMPERATURE_2         8Eh         No           READ_DUTY_CYCLE         94h         No           Designation         Cmd         Prot           READ_FREQUENCY         95h         No           Configuration and Control Commands           USER_DATA_00         B0h         No           Learn More Commands (Read Only)           PMBUS_REVISION         98h         No           MFR_ID         99h         Yes           MFR_MODEL         9Ah         Yes           MFR_REVISION         9Bh         Yes           MFR_REVISION         9Ch         Yes           MFR_DATE         9Dh         Yes           MFR_DATE         9Dh         Yes           MFR_DATE         9Ph         Yes	_		
READ_TEMPERATURE_1         8Dh         No           READ_DUTY_CYCLE         94h         No           Designation         Cmd         Prot           READ_FREQUENCY         95h         No           Configuration and Control Commands           USER_DATA_00         B0h         No           Identification Commands (Read Only)           PMBUS_REVISION         98h         No           MFR_ID         99h         Yes           MFR_MODEL         9Ah         Yes           MFR_REVISION         98h         Yes           MFR_DATE         9Dh         Yes           MFR_DATE         9Dh         Yes           MFR_DATE         9Dh         Yes           MFR_SERIAL         9eh         Yes           Supervisory Commands           STORE_DEFAULT_ALL         11h         Yes           STORE_DEFAULT_ALL         12h         No           STORE_USER_ALL         15h         No           RESTORE_DEFAULT_ALL         12h         No           STORE_USER_ALL         16h         No           CAPABLITY         19h         No           Product Specific Commands     <	_		
READ_TEMPERATURE_2         8Eh         No           READ_DUTY_CYCLE         94h         No           Designation         Cmd         Prot           READ_FREQUENCY         95h         No           Configuration and Control Commands           USER_DATA_00         B0h         No           Identification Commands (Read Only)           PMBUS_REVISION         98h         No           MFR_ID         99h         Yes           MFR_MODEL         9Ah         Yes           MFR_REVISION         98h         Yes           MFR_DATE         99h         Yes           MFR_ESTION         90h         Yes           MFR_POATE         19h<	READ_IOUT	8Ch	No
READ_DUTY_CYCLE         94h         No           Designation         Cmd         Prot           READ_FREQUENCY         95h         No           Configuration and Control Commands         User_Data_00         B0h         No           USER_DATA_00         B0h         No           Identification Commands (Read Only)         PMBUS_REVISION         98h         No           MFR_ID         99h         Yes         MFR_REVISION         98h         Yes           MFR_REVISION         98h         Yes         MFR_REVISION         98h         Yes           MFR_DATE         90h         Yes         MFR_REVISION         98h         Yes           MFR_DATE         90h         Yes         MFR_RESTRIAL         92h         Yes           MFR_DATE         90h         Yes         MFR_RESTRIAL         92h         Yes           STORE_DATE         90h         Yes         MFR_RESTRIAL         92h         Yes           STORE_DEFAULT_ALL         11h         Yes         Yes         MFR_RESTRIAL         11h         Yes           STORE_DEFAULT_ALL         12h         No         No         No         No         No         No         No         No         No	READ_TEMPERATURE_1	8Dh	No
Designation   Cmd   Prot	READ_TEMPERATURE_2	8Eh	No
READ_FREQUENCY	READ_DUTY_CYCLE	94h	No
Configuration and Control Commands   B0h   No   Identification Commands (Read Only)	Designation	Cmd	Prot
USER_DATA_00   Boh   No   Identification Commands (Read Only)	READ_FREQUENCY	95h	No
USER_DATA_00   Boh   No   Identification Commands (Read Only)	Configuration and Control Commands		
Identification Commands (Read Only)   PMBUS_REVISION   98h   No   MFR_ID   99h   Yes   Yes   MFR_MODEL   9Ah   Yes   MFR_MODEL   9Ah   Yes   MFR_REVISION   98h   Yes   MFR_DATE   9Dh   Yes   MFR_DATE   9Dh   Yes   MFR_DATE   9Dh   Yes   MFR_SERIAL   9Eh   Yes   Supervisory Commands   STORE_DEFAULT_ALL   11h   Yes   RESTORE_DEFAULT_ALL   12h   No   STORE_USER_ALL   15h   No   RESTORE_USER_ALL   16h   No   CAPABILITY   19h   No   No   MFR_USER_GOOD_POLARITY   19h   No   No   MFR_VIN_SCALE_MONITOR   D3h   Yes   MFR_VIN_SCALE_MONITOR   D3h   Yes   MFR_VIN_DEFSET   DDh   Yes   MFR_VIN_DEFSET_MONITOR   DEh   Yes   MFR_EMOTE_TEMP_CAL   E2h   No   MFR_EMOTE_TEMP_CAL   E2h   No   MFR_EMOTE_TEMP_CAL   E2h   No   MFR_EMOTE_TEMP_CAL   E2h   No   MFR_EMOTE_TEMP_CAL   E3h   No   MFR_EMOTE_TEMP_CAL   E5h   Yes   MFR_EMOTE_TEMP_CAL   E5h   Yes   MFR_EMOTE_TEMP_CAL   E7h   Yes   MFR_EMOTE_TEMP_CAL   E7h   No   MFR_EMOTE_TEMP_CAL   E7h   Yes   MFR_EMOTE_TEMP_COEFF   E7h   Yes   MFR_ENDAD_BAND_JOUT_THRESHOLD   F3h   Yes   MFR_SECURITY_BIT_MASK   F4h   Yes   MFR_DEAD_BAND_JOUT_THRESHOLD   F3h   No   MFR_DEAD_BAND_JOUT_THRESHOLD   F3h   No   MFR_DEAD_BAND_JOUT_THRESHOLD   F3h   Yes   MFR_DEAD_BAND_JOUT_THRESHOLD   F3h	•	B0h	No
PMBUS_REVISION         98h         No           MFR_ID         99h         Yes           MFR_MODEL         9Ah         Yes           MFR_MODEL         9Ah         Yes           MFR_REVISION         9Bh         Yes           MFR_REVISION         9Ch         Yes           MFR_DATE         9Dh         Yes           MFR_SERIAL         9Ch         Yes           MFR_SERIAL         9Eh         Yes           Supervisory Commands         11h         Yes           RESTORE_DEFAULT_ALL         11h         Yes           RESTORE_USER_ALL         15h         No           STORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands             MFR_POWER_GOOD_POLARITY         Doh         No           MFR_POWER_GOOD_POLARITY         Doh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_REMOTE_TEMP_CAL         E1h			
MFR_ID         99h         Yes           MFR_MODEL         9Ah         Yes           MFR_REVISION         9Bh         Yes           MFR_LOCATION         9Ch         Yes           MFR_LOCATION         9Ch         Yes           MFR_DATE         9Dh         Yes           Supervisory         9Ch         Yes           SUPERIAL         9Dh         Yes           Supervisory Commands         9Eh         Yes           STORE_DEFAULT_ALL         11h         Yes           RESTORE_USER_ALL         12h         No           STORE_USER_ALL         15h         No           RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           PRESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           MFR_POWER_GOOD_POLARITY         19h         No           MFR_SCILE_CT_TEMP_SENSOR         DCh         No           MFR_SEECCT_TEMP_		98h	No
MFR_MODEL         9Ah         Yes           MFR_REVISION         9Bh         Yes           MFR_LOCATION         9Ch         Yes           MFR_DATE         9Dh         Yes           MFR_SERIAL         9Eh         Yes           SUPERVISORY COMMANDS         1         Yes           STORE_DEFAULT_ALL         11h         Yes           RESTORE_DEFAULT_ALL         12h         No           STORE_USER_ALL         15h         No           RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands         Dh         No           MFR_POWER_GOOD_POLARITY         Doh         No           MFR_POWER_GOOD_POLARITY         Doh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIOUT_OFFSET         DDh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_DEAD_BAND_DELAY <td>_</td> <td></td> <td></td>	_		
MFR_REVISION         9Bh         Yes           MFR_LOCATION         9Ch         Yes           MFR_DATE         9Dh         Yes           MFR_SERIAL         9Eh         Yes           MFR_SERIAL         9Eh         Yes           SUPER_JEFAULT_ALL         11h         Yes           RESTORE_DEFAULT_ALL         12h         No           STORE_USER_ALL         15h         No           RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands             MFR_POWER_GOOD_POLARITY         D0h         No           MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_CTAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY </td <td>_</td> <td></td> <td></td>	_		
MFR_LOCATION         9Ch         Yes           MFR_DATE         9Dh         Yes           MFR_SERIAL         9Eh         Yes           Supervisory Commands         STORE_DEFAULT_ALL         11h         Yes           RESTORE_DEFAULT_ALL         12h         No           STORE_USER_ALL         15h         No           RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VIN_OFFSET         DDh         Yes           MFR_VIN_OFFSET_INT         E1h         No           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_CTAL         E2h         No           MFR_REMOTE_CTAL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_DEAD_BAN	_	0,	
MFR_DATE         9Dh         Yes           MFR_SERIAL         9Eh         Yes           Supervisory Commands	_	-	
MFR_SERIAL         9Eh         Yes           Supervisory Commands         STORE_DEFAULT_ALL         11h         Yes           RESTORE_DEFAULT_ALL         12h         No           STORE_USER_ALL         15h         No           RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET_MONITOR         DEh         Yes           MFR_VIN_OFFSET_MONITOR         DEh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No     <	_		
SUPERVISORY COMMANDS STORE_DEFAULT_ALL STORE_DEFAULT_ALL 11h Yes RESTORE_DEFAULT_ALL 12h No STORE_USER_ALL 15h No RESTORE_USER_ALL 16h No CAPABILITY 19h No Product Specific Commands MFR_POWER_GOOD_POLARITY DOD NO MFR_VIN_SCALE_MONITOR MFR_VIN_SCALE_MONITOR MFR_VIN_OFFSET DD NO MFR_VIN_OFFSET DD NO MFR_VIN_OFFSET DD NO MFR_REMOTE_TEMP_CAL E2h No MFR_REMOTE_TEMP_CAL E2h No MFR_REMOTE_TEMP_CAL E2h No MFR_REMOTE_CTRL E3h No MFR_DEAD_BAND_DELAY E5h Yes MFR_DEBUG_BUFF FOh No MFR_SETUP_PASSWORD F1h No MFR_SETUP_PASSWORD F1h No MFR_SETUP_PASSWORD F1h No MFR_SETUP_PASSWORD F1h No MFR_SETUP_DESURITY_ONCE F2h No MFR_DEAD_BAND_IOUT_THRESHOLD F3h Yes MFR_SECONDARY_TURN F5h Yes MFR_MULTI_PIN_CONFIG F9h No MFR_MULTI_PIN_CONFIG F9h No MFR_MULTI_PIN_CONFIG F5h Yes MFR_DEAD_BAND_VIN_THRESHOLD FAh Yes MFR_MULTI_PIN_CONFIG F9h No MFR_DEAD_BAND_VIN_THRESHOLD FAh Yes	_		
STORE_DEFAULT_ALL         11h         Yes           RESTORE_DEFAULT_ALL         12h         No           STORE_USER_ALL         15h         No           RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_VIN_SCALE_MONITOR         D2h         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VIN_OFFSET_MONITOR         DEh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_DEAD_BAND_IUT_THRESHOLD         F3h         Yes           MFR_L	-	JLII	103
RESTORE_DEFAULT_ALL         12h         No           STORE_USER_ALL         15h         No           RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_TEMP_CAL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SECURITY_ONCE         F2h         No           MFR_D	• •	11h	Voc
STORE_USER_ALL         15h         No           RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_TEMP_OFFSET_MONITOR         DEh         Yes           MFR_REMOTE_TEMP_CALL         E2h         No           MFR_REMOTE_TEMP_CALL         E2h         No           MFR_REMOTE_TEMP_CALL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_DEAD_BAND_JUN_TEMPSHOLD<	-		
RESTORE_USER_ALL         16h         No           CAPABILITY         19h         No           Product Specific Commands           MFR_POWER_GOOD_POLARITY         D0h         No           MFR_PUN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_VOUT_OFFSET_INT         E1h         No           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_TEMP_CAL         E3h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_DEAD_BAND_INT_VURN         F5h         Yes           MFR_PIMARY_TURN         F5h         Yes           MFR_BECONDARY_TURN         F6h         Yes           MFR_BECONDAR			
CAPABILITY         19h         No           Product Specific Commands             MFR_POWER_GOOD_POLARITY         D0h         No           MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_DEAD_BAND_IVIN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_MILTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes<			
Product Specific Commands  MFR_POWER_GOOD_POLARITY  DOh No  MFR_VIN_SCALE_MONITOR  MFR_SELECT_TEMP_SENSOR  MFR_SELECT_TEMP_SENSOR  DDh Yes  MFR_VOUT_OFFSET  DDh Yes  MFR_TEMP_OFFSET_INT  E1h No  MFR_REMOTE_TEMP_CAL  E2h No  MFR_REMOTE_CTRL  E3h No  MFR_DEAD_BAND_DELAY  MFR_DEAD_BAND_DELAY  MFR_DEBUG_BUFF  MFR_DEBUG_BUFF  FOh No  MFR_SETUP_PASSWORD  MFR_DISABLE_SECURITY_ONCE  MFR_DEAD_BAND_IOUT_THRESHOLD  MFR_SECURITY_BIT_MASK  MFR_PRIMARY_TURN  MFR_SECONDARY_TURN  MFR_MULTI_PIN_CONFIG  MFR_DEAD_BAND_VIN_THRESHOLD  MFR_MULTI_PIN_CONFIG  MFR_DEAD_BAND_VIN_THRESHOLD  MFR_MULTI_PIN_CONFIG  MFR_DEAD_BAND_VIN_THRESHOLD  MFR_DEAD_BAND_VIN_THRESHOLD  MFR_MULTI_PIN_CONFIG  MFR_DEAD_BAND_VIN_THRESHOLD  FAh Yes  MFR_DEAD_BAND_VIN_THRESHOLD			
MFR_POWER_GOOD_POLARITY         D0h         No           MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_BEAD_BAND_VIN_THRESHOLD         F8h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes		1911	INO
MFR_VIN_SCALE_MONITOR         D3h         Yes           MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_DEAD_BAND_IOUT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes	•	DOL	
MFR_SELECT_TEMP_SENSOR         DCh         No           MFR_VIN_OFFSET         DDh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_SECONDARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes			
MFR_VIN_OFFSET         DDh         Yes           MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_SECUNDARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THYS         F8h         Yes			
MFR_VOUT_OFFSET_MONITOR         DEh         Yes           MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_SECONDARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes			
MFR_TEMP_OFFSET_INT         E1h         No           MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_SECUNTY_URN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         F8h         Yes			
MFR_REMOTE_TEMP_CAL         E2h         No           MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_PRIMARY_TURN         F6h         Yes           MFR_LLIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THYS         F8h         Yes			
MFR_REMOTE_CTRL         E3h         No           MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_THYS         F8h         Yes			
MFR_DEAD_BAND_DELAY         E5h         Yes           MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         F8h         Yes			
MFR_TEMP_COEFF         E7h         Yes           MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         F8h         Yes			
MFR_DEBUG_BUFF         F0h         No           MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes			
MFR_SETUP_PASSWORD         F1h         No           MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes			
MFR_DISABLE_SECURITY_ONCE         F2h         No           MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes			
MFR_DEAD_BAND_IOUT_THRESHOLD         F3h         Yes           MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes			
MFR_SECURITY_BIT_MASK         F4h         Yes           MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes			
MFR_PRIMARY_TURN         F5h         Yes           MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes			
MFR_SECONDARY_TURN         F6h         Yes           MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes			
MFR_ILIM_SOFTSTART         F8h         No           MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes			
MFR_MULTI_PIN_CONFIG         F9h         No           MFR_DEAD_BAND_VIN_THRESHOLD         FAh         Yes           MFR_DEAD_BAND_VIN_IOUT_HYS         FBh         Yes	-		
MFR_DEAD_BAND_VIN_THRESHOLD FAh Yes MFR_DEAD_BAND_VIN_IOUT_HYS FBh Yes			
MFR_DEAD_BAND_VIN_IOUT_HYS FBh Yes	MFR_MULTI_PIN_CONFIG		No
		FAh	Yes
MFR RESTART FEh No	MFR_DEAD_BAND_VIN_IOUT_HYS	FBh	Yes
	MFR_RESTART	FEh	No

Notes:

CMD is short for Command.

PROT is short for commands that are protected with security mask.

#### **Thermal Shutdown**

Extended operation at excessive temperature will initiate overtemperature shutdown triggered by a temperature sensor inside the PWM controller. This operates similarly to overcurrent and short circuit mode. The inception point of the overtemperature condition depends on the average power delivered, the ambient temperature and the extent of forced cooling airflow. Thermal shutdown uses only the hiccup mode (autorestart).

#### **Start Up Considerations**

When power is first applied to the DC/DC converter, there is some risk of start up difficulties if you do not have both low AC and DC impedance and adequate regulation of the input source. Make sure that your source supply does not allow the instantaneous input voltage to go below the minimum voltage at all times.

Use a moderate size capacitor very close to the input terminals. You may need two or more parallel capacitors. A larger electrolytic or ceramic cap supplies the surge current and a smaller parallel low-ESR ceramic cap gives low AC impedance.

Remember that the input current is carried both by the wiring and the ground plane return. Make sure the ground plane uses adequate thickness copper. Run additional bus wire if necessary.

#### **Input Fusing**

Certain applications and/or safety agencies may require fuses at the inputs of power conversion components. Fuses should also be used when there is the possibility of sustained input voltage reversal which is not current-limited. For greatest safety, we recommend a fast blow fuse installed in the ungrounded input supply line.

#### Input Under-Voltage Shutdown and Start-Up Threshold

Under normal start-up conditions, converters will not begin to regulate properly until the rising input voltage exceeds and remains at the Start-Up Threshold Voltage (see Specifications). Once operating, converters will not turn off until the input voltage drops below the Under-Voltage Shutdown Limit. Subsequent restart will not occur until the input voltage rises again above the Start-Up Threshold. This built-in hysteresis prevents any unstable on/off operation at a single input voltage. The over/under-voltage fault level and fault response can be configured via the PMBus interface.

#### **Start-Up Time**

Assuming that the output current is set at the rated maximum, the Vin to Vout Start-Up Time (see Specifications) is the time interval between the point when the rising input voltage crosses the Start-Up Threshold and the fully loaded output voltage enters and remains within its specified accuracy band. Actual measured times will vary with input source impedance, external input capacitance, input voltage slew rate and final value of the input voltage as it appears at the converter.

These converters include a soft start circuit to moderate the duty cycle of its PWM controller at power up, thereby limiting the input inrush current.

The On/Off Remote Control interval from On command to Vout (final  $\pm 5\%$ ) assumes that the converter already has its input voltage stabilized above the Start-Up Threshold before the On command. The interval is measured from the On command until the output enters and remains within its specified accuracy band. The specification assumes that the output is fully loaded at maximum rated current. Similar conditions apply to the On to Vout regulated specification such as external load capacitance and soft start circuitry.

## **Recommended Input Filtering**

The user must assure that the input source has low AC impedance to provide dynamic stability and that the input supply has little or no inductive content, including long distributed wiring to a remote power supply. The converter will operate with no additional external capacitance if these conditions are met.

For best performance, we recommend installing a low-ESR capacitor immediately adjacent to the converter's input terminals. The capacitor should be a ceramic type such as the Murata GRM32 series or a polymer type. Make sure that the input terminals do not go below the undervoltage shutdown voltage at all times. More input bulk capacitance may be added in parallel (either electrolytic or tantalum) if needed.

#### **Recommended Output Filtering**

The converter will achieve its rated output ripple and noise with no additional external capacitor. However, the user may install more external output capacitance to reduce the ripple even further or for improved dynamic response. Again, use low-ESR ceramic (Murata GRM32 series) or polymer capacitors. Mount these close to the converter. Measure the output ripple under your load conditions.

Use only as much capacitance as required to achieve your ripple and noise objectives. Excessive capacitance can make step load recovery sluggish or possibly introduce instability. Do not exceed the maximum rated output capacitance listed in the specifications.

### **Input Ripple Current and Output Noise**

All models in this converter series are tested and specified for input reflected ripple current and output noise using designated external input/output components, circuits and layout as shown in the figures below. The Cbus and Lbus components simulate a typical DC voltage bus.

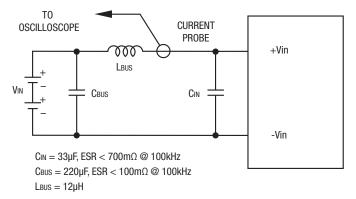


Figure 3. Measuring Input Ripple Current

#### **Minimum Output Loading Requirements**

All models regulate within specification and are stable under no load to full load conditions. Operation under no load might however slightly increase output ripple and noise.

### Thermal Shutdown (OTP, UTP)

To prevent many over temperature problems and damage, these converters include thermal shutdown circuitry. If environmental conditions cause the temperature of the DC/DC's to rise above the Operating Temperature Range up to the shutdown temperature, an on-board electronic temperature sensor will power down the unit. When the temperature decreases below the turn-on

# 420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)

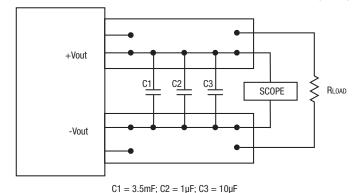


Figure 4. Measuring Output Ripple and Noise (PARD)

LOAD 2-3 INCHES (51-76mm) FROM MODULE

threshold set in the command OT\_WARM\_LIMIT (0X51), the hysteresis is defined in general electrical specification section. The OTP and hysteresis of the module can be re-configured using the PMBus interface. The module has also an under temperature protection. The OTP and UTP fault limit and fault response can be configured via the PMBus. Note: using the fault response "continue without interruption" may cause permanent damage to the module. There is a small amount of hysteresis to prevent rapid on/off cycling.

**CAUTION:** If you operate too close to the thermal limits, the converter may shut down suddenly without warning. Be sure to thoroughly test your application to avoid unplanned thermal shutdown.

#### **Temperature Derating Curves**

The graphs in this data sheet illustrate typical operation under a variety of conditions. The Derating curves show the maximum continuous ambient air temperature and decreasing maximum output current which is acceptable under increasing forced airflow measured in Linear Feet per Minute ("LFM"). Note that these are AVERAGE measurements. The converter will accept brief increases in current or reduced airflow as long as the average is not exceeded.

Note that the temperatures are of the ambient airflow, not the converter itself which is obviously running at higher temperature than the outside air. Also note that "natural convection" is defined as very flow rates which are not using fan-forced airflow. Depending on the application, "natural convection" is usually about 30-65 LFM but is not equal to still air (0 LFM).

Murata Power Solutions makes Characterization measurements in a closed cycle wind tunnel with calibrated airflow. We use both thermocouples and an infrared camera system to observe thermal performance. As a practical matter, it is quite difficult to insert an anemometer to precisely measure airflow in most applications. Sometimes it is possible to estimate the effective airflow if you thoroughly understand the enclosure geometry, entry/exit orifice areas and the fan flowrate specifications.

**CAUTION:** If you exceed these Derating guidelines, the converter may have an unplanned Over Temperature shut down. Also, these graphs are all collected near Sea Level altitude. Be sure to reduce the derating for higher altitude.

#### **Output Fusing**

The converter is extensively protected against current, voltage and temperature extremes. However your output application circuit may need additional protection. In the extremely unlikely event of output circuit failure, excessive voltage could be applied to your circuit. Consider using an appropriate fuse in series with the output.

## **Output Short Circuit Condition**

The short circuit condition is an extension of the "Current Limiting" condition. When the monitored peak current signal reaches a certain range, the PWM controller's outputs are shut off thereby turning the converter "off." This is followed by an extended time out period. This period can vary depending on other conditions such as the input voltage level. Following this time out period, the PWM controller will attempt to re-start the converter by initiating a "normal start cycle" which includes softstart. If the "fault condition" persists, another "hiccup" cycle is initiated. This "cycle" can and will continue indefinitely until such time as the "fault condition" is removed, at which time the converter will resume "normal operation." Operating in the "hiccup" mode during a fault condition is advantageous in that average input and output power levels are held low preventing excessive internal increases in temperature.

#### **Output Capacitive Load**

These converters do not require external capacitance added to achieve rated specifications. Users should only consider adding capacitance to reduce switching noise and/or to handle spike current load steps. Install only enough capacitance to achieve noise objectives. Excess external capacitance may cause degraded transient response and possible oscillation or instability.

#### **Remote Sense Input**

Use the Sense inputs with caution. Sense is normally connected *at the load*. Sense inputs compensate for output voltage inaccuracy delivered at the load. This is done by correcting IR voltage drops along the output wiring and the current carrying capacity of PC board etch. This output drop (the difference between Sense and Vout when measured at the converter) should not exceed 0.5V. Consider using heavier wire if this drop is excessive. Sense inputs also improve the stability of the converter and load system by optimizing the control loop phase margin.

Note: The Sense input and power Vout lines are internally connected through low value resistors to their respective polarities so that the converter can operate without external connection to the Sense. Nevertheless, if the Sense function is not used for remote regulation, the user should connect +Sense to +Vout and -Sense to -Vout at the converter pins.

The remote Sense lines carry very little current. They are also capacitively coupled to the output lines and therefore are in the feedback control loop to regulate and stabilize the output. As such, they are not low impedance inputs and must be treated with care in PC board layouts. Sense lines on the PCB

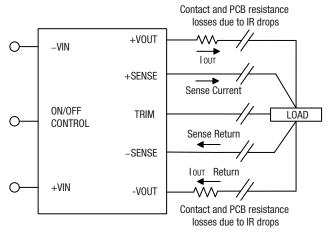


Figure 5. Remote Sense Circuit Configuration

# 420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)

should run adjacent to DC signals, preferably Ground. In cables and discrete wiring, use twisted pair, shielded tubing or similar techniques.

Any long, distributed wiring and/or significant inductance introduced into the Sense control loop can adversely affect overall system stability. If in doubt, test your applications by observing the converter's output transient response during step loads. There should not be any appreciable ringing or oscillation. You may also adjust the output trim slightly to compensate for voltage loss in any external filter elements. Do not exceed maximum power ratings.

Please observe Sense inputs tolerance to avoid improper operation:

#### $[Vout(+) - Vout(-)] - [Sense(+) - Sense(-)] \le 10\%$ of Vout

Output overvoltage protection is monitored at the output voltage pin, not the Sense pin. Therefore excessive voltage differences between Vout and Sense together with trim adjustment of the output can cause the overvoltage protection circuit to activate and shut down the output.


Power derating of the converter is based on the combination of maximum output current and the highest output voltage. Therefore the designer must ensure:

(Vout at pins) x (lout)  $\leq$  (Max. rated output power)

#### **Soldering Guidelines**

Murata Power Solutions recommends the specifications below when installing these converters. These specifications vary depending on the solder type. Exceeding these specifications may cause damage to the product. Be cautious when there is high atmospheric humidity. We strongly recommend a mild pre-bake (100° C. for 30 minutes). Your production environment may differ; therefore please thoroughly review these guidelines with your process engineers.

Wave Solder Operations for thr	ough-hole	mounted products (THMT)	
For Sn/Ag/Cu based solders:			
Maximum Preheat Temperature		115° C.	
Maximum Pot Temperature		270° C.	
Maximum Solder Dwell Time	Maximum Solder Dwell Time		
For Sn/Pb based solders:			
Maximum Preheat Temperature		105° C.	
Maximum Pot Temperature		250° C.	
Maximum Solder Dwell Time		6 seconds	
Reflow Solder Operations for surface-mount products (SMT)			
For Sn/Ag/Cu based solders:			
Preheat Temperature	Less tha	Less than 1 °C. per second	
Time over Liquidus	45 to 75	45 to 75 seconds	
Maximum Peak Temperature	260 °C.	260 °C.	
Cooling Rate	Less tha	Less than 3 °C. per second	
For Sn/Pb based solders:			
Preheat Temperature	Less tha	Less than 1 °C. per second	
Time over Liquidus	60 to 75	60 to 75 seconds	
Maximum Peak Temperature	235 °C.	235 °C.	
Cooling Rate	Less tha	Less than 3 °C. per second	

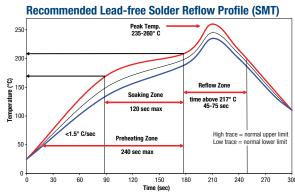

# IR Transparent optical window Variable Unit under speed fan test (UUT) IR Video Camera Heating element Precision low-rate anemometer 3" below UUT Ambient temperature sensor Airflow collimator

Figure 6. Vertical Wind Tunnel

# 420W Fully Regulated, Digitally Controlled, Advanced Bus Converter (ABC)

#### **Vertical Wind Tunnel**

Murata Power Solutions employs a computer controlled custom-designed closed loop vertical wind tunnel, infrared video camera system, and test instrumentation for accurate airflow and heat dissipation analysis of power products. The system includes a precision low flow-rate anemometer, variable speed fan, power supply input and load controls, temperature gauges, and adjustable heating element.

The IR camera monitors the thermal performance of the Unit Under Test (UUT) under static steady-state conditions. A special optical port is used which is transparent to infrared wavelengths.

Both through-hole and surface mount converters are soldered down to a 10" x 10" host carrier board for realistic heat absorption and spreading. Both longitudinal and transverse airflow studies are possible by rotation of this carrier board since there are often significant differences in the heat dissipation in the two airflow directions. The combination of adjustable airflow, adjustable ambient heat, and adjustable Input/Output currents and voltages mean that a very wide range of measurement conditions can be studied.

The collimator reduces the amount of turbulence adjacent to the UUT by minimizing airflow turbulence. Such turbulence influences the effective heat transfer characteristics and gives false readings. Excess turbulence removes more heat from some surfaces and less heat from others, possibly causing uneven overheating.

Both sides of the UUT are studied since there are different thermal gradients on each side. The adjustable heating element and fan, built-in temperature gauges, and no-contact

IR camera mean that power supplies are tested in real-world conditions.

Murata Power Solutions, Inc. 11 Cabot Boulevard, Mansfield, MA 02048-1151 U.S.A. ISO 9001 and 14001 REGISTERED



This product is subject to the following operating requirements and the Life and Safety Critical Application Sales Policy:

Refer to: <a href="http://www.murata-ps.com/requirements/">http://www.murata-ps.com/requirements/</a>

Murata Power Solutions, Inc. makes no representation that the use of its products in the circuits described herein, or the use of other technical information contained herein, will not infringe upon existing or future patent rights. The descriptions contained herein do not imply the granting of licenses to make, use, or sell equipment constructed in accordance therewith. Specifications are subtract to change without notice.